


	INTAKE	EXHAUST
ADVERTISED DURATION	262°	258°
ACTUAL CAM LIFT (in/mm)	.436" / 11.07mm	.422" / 10.72mm
ROCKER ARM RATIO	1:1	1:1
CENTERLINE	112°	113°
LOBE SEPERATION	112.5°	
DURATION AT 0.050" CAM	234°	230°
DURATION AT 0.050" VALVE	n/a	n/a
VALVE CLEARANCE	.008" / .20mm SOLID	.012" / .30mm SOLID
RECOMMENDED SPRING KIT	BC0900 - Beehive/Titanium Retainer	

CAMSHAFT TIMING AT 0.050" VALVE LIFT	OPEN	CLOSES
	INTAKE	5° BTDC
EXHAUST	47° BBDC	3° ATDC

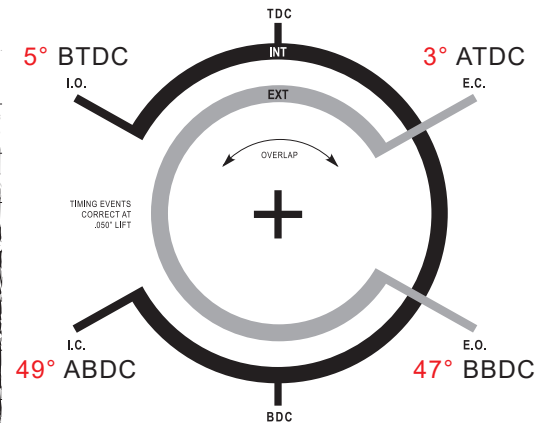

### NOTES

#### STAGE 2+ PROFILE

- New, high performance cam cores with stock base circle.
- Works with OE valve spring or BC0900-2S or BC0900-2 kit.

BC does not recommend using synthetic oil during break-in or operation. Follow OEM manufacturer's torque sequence and specifications. Use liberal amount of aftermarket engine assembly lube during installation. Check follower or bucket surfaces for abnormal wear and/or scuffing. On initial start-up and break-in run engine at 1500-2500 rpm for 20 minutes. **Camshafts damaged by improper installation, excessive spring pressure or retainers contacting valve guides or seals are void from warranty. Not legal for sale or use on emission controlled motor vehicles.**

